



TRIUMATIC MK. II

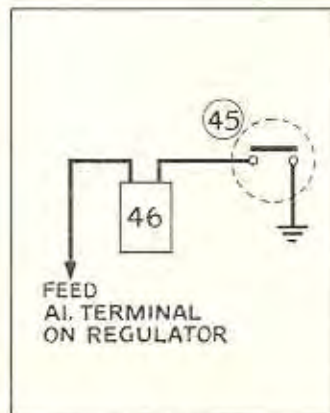

TRIUMATIC MK I

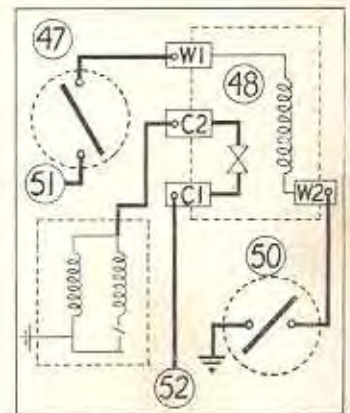

OVERDRIVE UNIT

Fig. 1. Wiring diagram

NOTATION FOR FIG. 1

<i>Item</i>	<i>Description</i>	<i>Item</i>	<i>Description</i>
1	Generator—12 volt	28	Oil pressure warning light and switch
2	Ignition warning light	29	Fuel gauge and tank unit
3	Ignition switch	30	Stop lamp switch
4	Instrument panel earth	31	R.H. Stop lamp
5	Control box	32	L.H. Stop lamp
6	Starter motor and switch	33	R.H. Rear flasher
7	Battery—12 volt	34	R.H. Front flasher
8	Main beam warning light	35	Flasher warning light and switch
9	R.H. Headlamp main beam	36	L.H. Front flasher
10	L.H. Headlamp main beam	37	L.H. Rear flasher
11	R.H. Headlamp dip	38	Flasher unit
12	L.H. Headlamp dip	39	Screenwiper motor and switch
13	L.H. Sidelamp	40	Gearshift lever switch (Mk. II) 3 pole
14	R.H. Sidelamp	41	Choke solenoid—blue wires—continuous rating—0.35 amps.
15	Dipper switch	42	Gearshift solenoid—black wires—intermittent rating—1.35 amps.
16	Lighting switch	43	Choke switch
17	Line fuse	44	Control relay—"D" terminal to dynamo—"S" terminal to choke switch
18	Horn	45	Gearshift lever switch (Mk. I) 2 pole
19	Horn push	46	Solenoid
20	Interior light and switch	47	Steering column switch
21	Door switches (where fitted)	48	Relay
22	Panel lights	49	Overdrive solenoid
23	Number plate lamp	50	Transmission switch
24	R.H. Tail lamp	51	Feed wire to ignition switch "A"
25	L.H. Tail lamp	52	Feed wire to control box terminal "A"
26	Ignition coil		
27	Distributor		

CABLE COLOUR CODE			
B	BLACK	S	SLATE
U	BLUE	W	WHITE
N	BROWN	Y	YELLOW
G	GREEN	D	DARK
K	PINK	L	LIGHT
P	PURPLE	M	MEDIUM
R	RED		